



FR1 SERIES

Tank top return filters


Return filter for mounting on the tank lid. Filter element with inbuilt bypass valve. Flow rates up to 160 gpm.

TECHNICAL INFORMATION

HOUSING

tested according to NFPA T3.10.5.1* , ISO3968

HYDRAULIC SYMBOL:

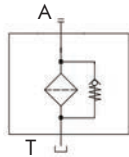

PRESSURE:

Max working 120 psi
Burst 230 psi

CONNECTION PORTS:

3/4" – 2" NPT alt. SAE-Oring

MATERIALS:

Cover: aluminium alloy
Head: aluminium alloy
Bowl: PA6 reinforced (size 10 to 43) - zinc plated steel (size 50 to 64)
Seal: NBR (FKM on request)

BYPASS:

Inbuilt in the filter element
B version 25 psi
C version 44 psi

ELEMENT

tested according to ISO 2941, 2942, 2943, 3968, 16889, 23181

FILTER MEDIA:

Microglass fiber G06-G10-G15-G25
Cellulose C10-C25
Wire mesh T60

DIFFERENTIAL COLLAPSE PRESSURE:

145 psi

OPERATING TEMPERATURE RANGE:

-13°F +212°F

FLUID COMPATIBILITY:



Full with HH-HL-HM-HV (acc. to ISO 2943).
For use with other fluid please contact Filtrec Customer Service
(info@filtrec.it).

* as reference method only for verifying the pressure fatigue resistance and establishing the burst pressure ratings.

OVERALL DIMENSIONS



FR - 1 - 10 / 11 / 20 / 22 / 30 / 31

TANK MOUNTING PATTERN

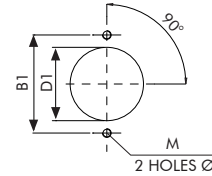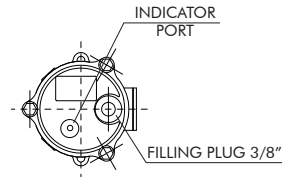




FR - 1 - 40 / 43

TANK MOUNTING PATTERN

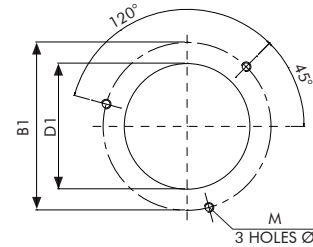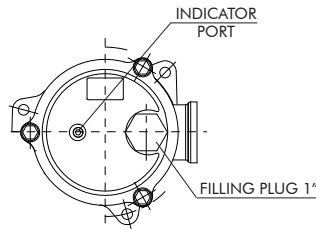

FR - 1 - 50 / 51 / 60 / 64

TANK MOUNTING PATTERN

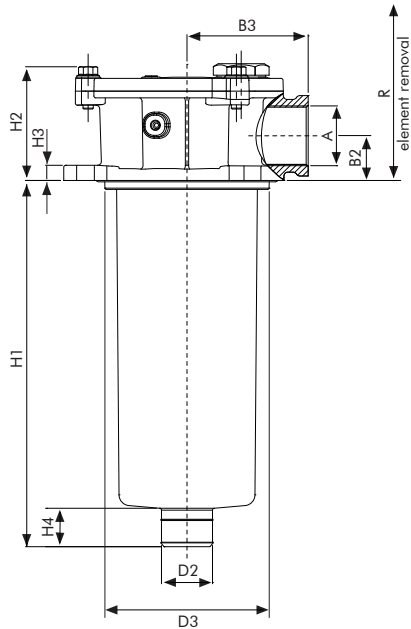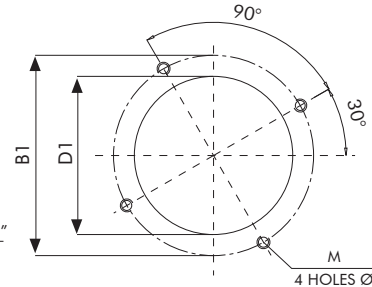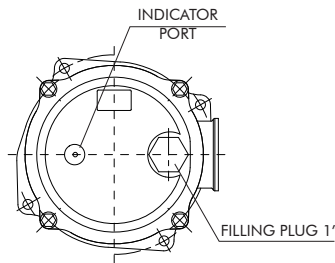

NOMINAL SIZE

MODEL	A	Ø B1	B2	B3	Ø D1	Ø D2	Ø D3	H1	H2	H3	H4	M	R	WEIGHT lbs
FR1 10	NPT 3/4" or SAE-12	3.50	0.98	2.01	2.66	0.94	2.64	3.23	2.36	0.31	0.87	1/4" x 20 UNC	5.91	0.99
FR1 11								6.10						8.66
FR1 20								4.17						7.48
FR1 22	NPT 1 1/4" or SAE-20	4.53	1.26	2.64	3.48	1.10	3.43	5.94	2.87		0.94	5/16" x 18 UNC	9.06	1.98
FR1 30								9.13						12.20
FR1 31								13.23						16.54
FR1 40	NPT 1 1/2" or SAE-24	6.89	1.38	3.74	5.12	1.57	5.08	9.49	3.54	0.43	1.18			12.60
FR1 43								11.30						14.17
FR1 50								7.13						10.63
FR1 51	NPT 2" or SAE-32	8.66	1.65	4.53	6.89	1.97	6.85	9.45	4.13		1.97	3/8" x 16 UNC		7.92
FR1 60								11.38						7.92
FR1 64								11.38						9.24

ORDERING INFORMATION

1.	2.	3.	4.	5.	6.	7.	8.	9.
FR1	30	G15	B	B	N6	0	C	000
R1	30	G15	B	SPARE ELEMENT				

1. FILTER SERIES	FR1
2. FILTER SIZE	10-11 20-22-30-31 40-43 50-51-60-64
3. FILTER MEDIA	G06 glassfiber $\beta_{7\mu m(c)} > 1.000$ G10 glassfiber $\beta_{12\mu m(c)} > 1.000$ G15 glassfiber $\beta_{18\mu m(c)} > 1.000$ G25 glassfiber $\beta_{22\mu m(c)} > 1.000$ C10 paper $\beta_{10\mu m(c)} > 2$ C25 paper $\beta_{15\mu m(c)} > 2$ T60 wire mesh 60 μm
4. BYPASS VALVE	B 25 psi C 44 psi (for glassfiber elements only)
5. SEALS	B NBR
6. CONNECTION PORT	N4 NPT 3/4" — size 10 to 11 S4 SAE-12 N6 NPT 1 1/4" — size 20 to 31 S6 SAE-20 N7 NPT 1 1/2" — size 40 to 43 S7 SAE-24 N8 NPT 2" — size 50 to 64 S8 SAE-32
7. FILLING PLUG	0 no filling plug T with filling plug
8. INDICATOR PORT	C 1/8" plugged
9. CLOGGING INDICATORS	000 no indicator MPB press. gauge rear connection MRB press. gauge radial connection for "B" bypass PDB pressure switch MPC press. gauge rear connection MRC press. gauge radial connection for "C" bypass PDC pressure switch







PRESSURE DROP (Δp) INFORMATION FOR FILTER SIZING

The total Delta P through a filter assembly is given from Housing Δp + Element Δp .
The max recommended total Δp for return filters is 6-9 psi with clean element.

N.B. All the reported data have been obtained at our laboratory, according to specification ISO3968 with mineral oil having 32 cSt viscosity and s.g. 0.875.

HOUSING PRESSURE DROP

The housing Δp is given by the curve of the considered model and port, in correspondence of the flow rate value.

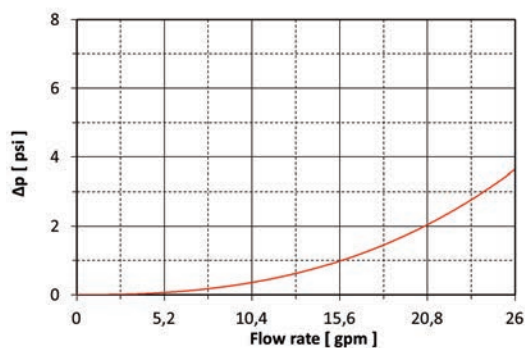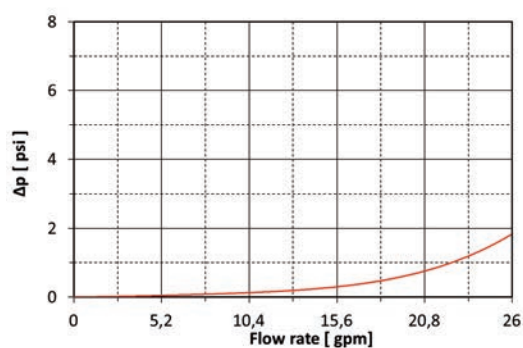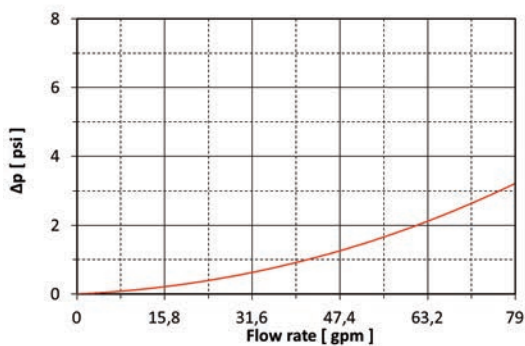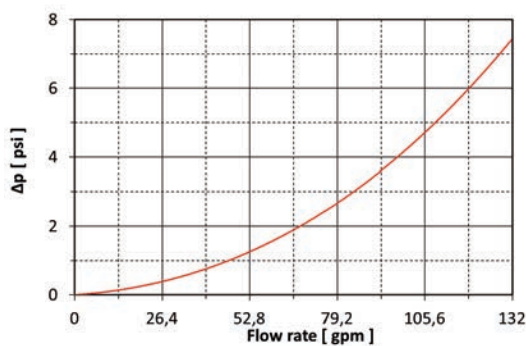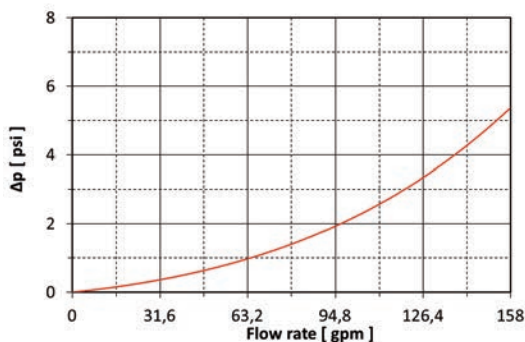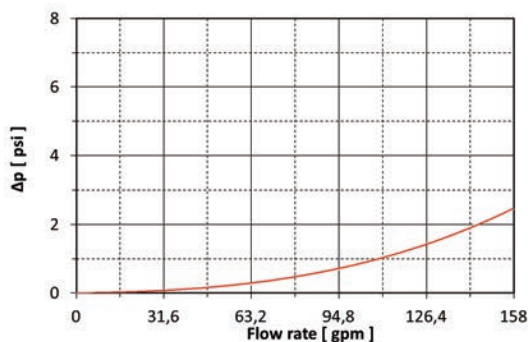FR110-11

FR120-22

FR130-31

FR140-43

FR150-51

FR160-64


ELEMENT PRESSURE DROP

The element Δp (psi) is given by the flow rate (gpm) multiplied by the factor in the table here below corresponding to the selected media.

If the oil has a viscosity V_1 different than 32 cSt a corrective factor $V_1/32$ must be applied.

Example: 21 gpm with R130G10B and oil viscosity 46 cSt $> 21 \times 0.19 \times 46/32 = 5.74$ psi

	G06	G10	G15	G25	C10	C25	T60
R110	2,06	0,88	0,69	0,48	0,27	0,23	0,14
R111	1,59	0,45	0,39	0,17	0,15	0,13	0,05
R120	0,84	0,59	0,39	0,39	0,30	0,14	0,12
R122	0,48	0,32	0,22	0,22	0,15	0,08	0,04
R130	0,31	0,19	0,13	0,12	0,09	0,05	0,03
R131	0,20	0,12	0,08	0,08	0,05	0,02	0,01
R140	0,15	0,08	0,08	0,06	0,06	0,01	0,01
R143	0,14	0,07	0,07	0,05	0,05	0,01	0,01
R150	0,13	0,07	0,07	0,05	0,05	0,04	0,01
R151	0,11	0,05	0,05	0,04	0,04	0,02	0,01
R160	0,09	0,05	0,04	0,03	0,02	0,01	0,01
R164	0,08	0,03	0,03	0,02	0,02	0,02	0,01



EXAMPLE OF TOTAL Δp CALCULATION

FR130G10BBN60C000 with **21** gpm and oil **46** cSt:

Housing Δp 0.35 psi + element Δp 5.74 psi ($21 \times 0.19 \times 46/32$) = total assembly Δp 6.09 psi

BYPASS VALVE PRESSURE DROP

The bypass valve Δp is given by the curve of the considered model and setting, in correspondence of the flow rate value.

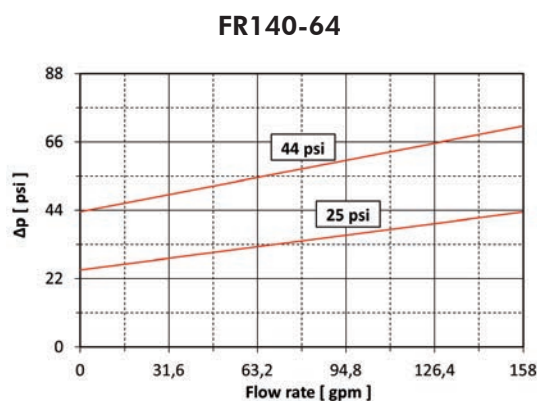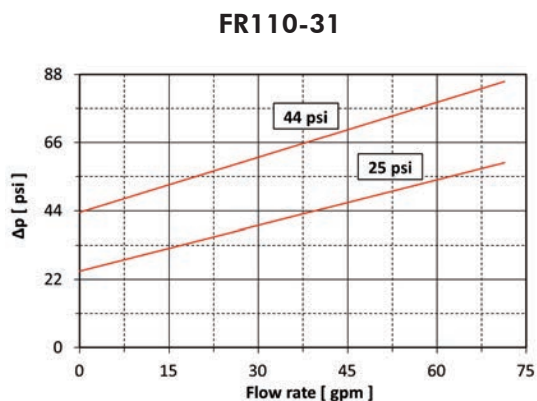

USER TIPS



- 1 FILTER HEAD
- 2 FILTER BOWL
- 3 FILTER ELEMENT
- 4 SPRING
- 5 INDICATOR PORT
- 6 FILLING PLUG

SPARE SEALS KIT

	NBR	FKM
FR-1-10/11	06.021.00170	06.021.00174
FR-1-20/22/30/31	06.021.00171	06.021.00175
FR-1-40/43	06.021.00172	06.021.00176
FR-1-50/51/60/64	06.021.00173	06.021.00177

FIXING BOLTS TIGHTENING TORQUE

M6	7.5 lb-ft
M8	18.5 lb-ft
M10	37.0 lb-ft

INDICATOR TIGHTENING TORQUE

7.5 lb-ft

SPARE SPRING

When a spare spring (4) is needed please ask for, specifying model and production batch (data given in the identification label on the top cover)

WARNING

-  Make sure that Personal Protective Equipment (PPE) is worn during installation and maintenance operation.

DISPOSAL OF FILTER ELEMENT

-  The used filter elements and the filter parts dirty of oil are classified as "Dangerous waste material": they must be disposed according to the local laws by authorized Companies.

INSTALLATION

- the filter head (1) must be properly positioned and well secured on the tank lid through the fixing holes
- the hose must be properly connected to the IN port
-  the OUT port must be clear (an extension tube could be fitted, if needed for having the outlet below the oil level)
- verify that no tension is present on the filter after mounting
- enough space must be available for filter element replacement
- the visual clogging indicator must be in a easily viewable position
- when a electrical indicator is used, make sure that it is properly wired
- keep in stock a spare FILTREC filter element for timely replacement when required

OPERATION

-  the filter must work within the operating conditions of pressure, temperature and compatibility given in the first page of this data sheet
- the filter element must be replaced as soon as the clogging indicator signals at working temperature
- If no clogging indicator is mounted, replace the element according to the system manufacturer's recommendations

MAINTENANCE

-  before removing the top cover from the head, ensure that the system is switched off and there is no residual pressure in the filter
- unscrew the fixing bolts of the top cover and remove it
- remove the spring (4) first, then the dirty element (3) and the bowl (2)
- clean the bowl (2) and fit a new FILTREC element (3), verifying the part number, particularly concerning the micron rating
- when fitting the new element (3), open its plastic protection on the open end side and insert it onto the spigot in the filter bowl, then remove completely the plastic protection
- check the top cover O-ring conditions and replace if necessary
- put the spring (4) in its position on the filter element (3)
- mount the top cover onto the head and fix it screwing the fixing bolts
-  the used filter elements cannot be cleaned and re-used

